

decoflex Repair Filler decoflex Reparaturspachtel

Ready to use dispersion filler for repairing wood, stone, concrete and masonry. For interior and exterior use. Solvent free.

Instructions for use:	<i>decoflex Repair filler</i> is a versatile repair filler for wood, stone, concrete, plaster, metal and masonry substrates. <i>decoflex Repair</i> filler can be applied to a thickness of up to 30 mm in one application and hardens evenly, without sinking or forming cracks. Not suitable for plastic or glass substrates or for areas with continuous exposure to water.	
Technical information:	Components:	Synthetic resin dispersion, special filler
	Density:	approx. 1.9 g/cm ³
	GISBAU product code:	M-DF01
Surface preparation:	The substrate must be stable and free of dust, grease etc. Strongly absorbent, abrasive and chalky surfaces should be pre-treated with <i>decotric Deeply Penetrating Primer – Solvent Free</i> . Weathered wood must be sanded down to good wood. Metal must be degreased, cleaned of rust and pre-treated with a primer (e.g. <i>BOB special primer</i>).	
Application:	Press <i>decoflex Repair filler</i> firmly into the cracks, gaps or holes which are to be filled and dry or wet smooth with a spatula. For optimal adhesion, it is recommended that the substrate is moistened before application. If applying very thin layers, you may wish to add up to 5% water.	
	Once completely hardened, <i>decoflex Repair filler</i> can be sanded, sawn, drilled or painted.	
	Do not use if the temperature of the room or substrate is below 5°C. Clean tools with water immediately after use.	
Storage:	Store in a cool and frost-free place. Keep containers tightly sealed	
Available size:	750 g PE container	033501001